


Alliant Power's no-hassle visual core inspection criteria ensures you are not penalized for damage you cannot see inside the diesel particulate filter (DPF) core. Please inspect the core using the visual inspection process outlined below.

1. Core must be like-for-like, and in as removed condition
2. Core that has been attempted to be cleaned in-field since removal from vehicle will not be accepted
3. Visually inspect the core housing. Dented flanges and housings may result in no core credit.
4. Visually inspect the core housing and substrate inlet and outlet faces for the following damage:

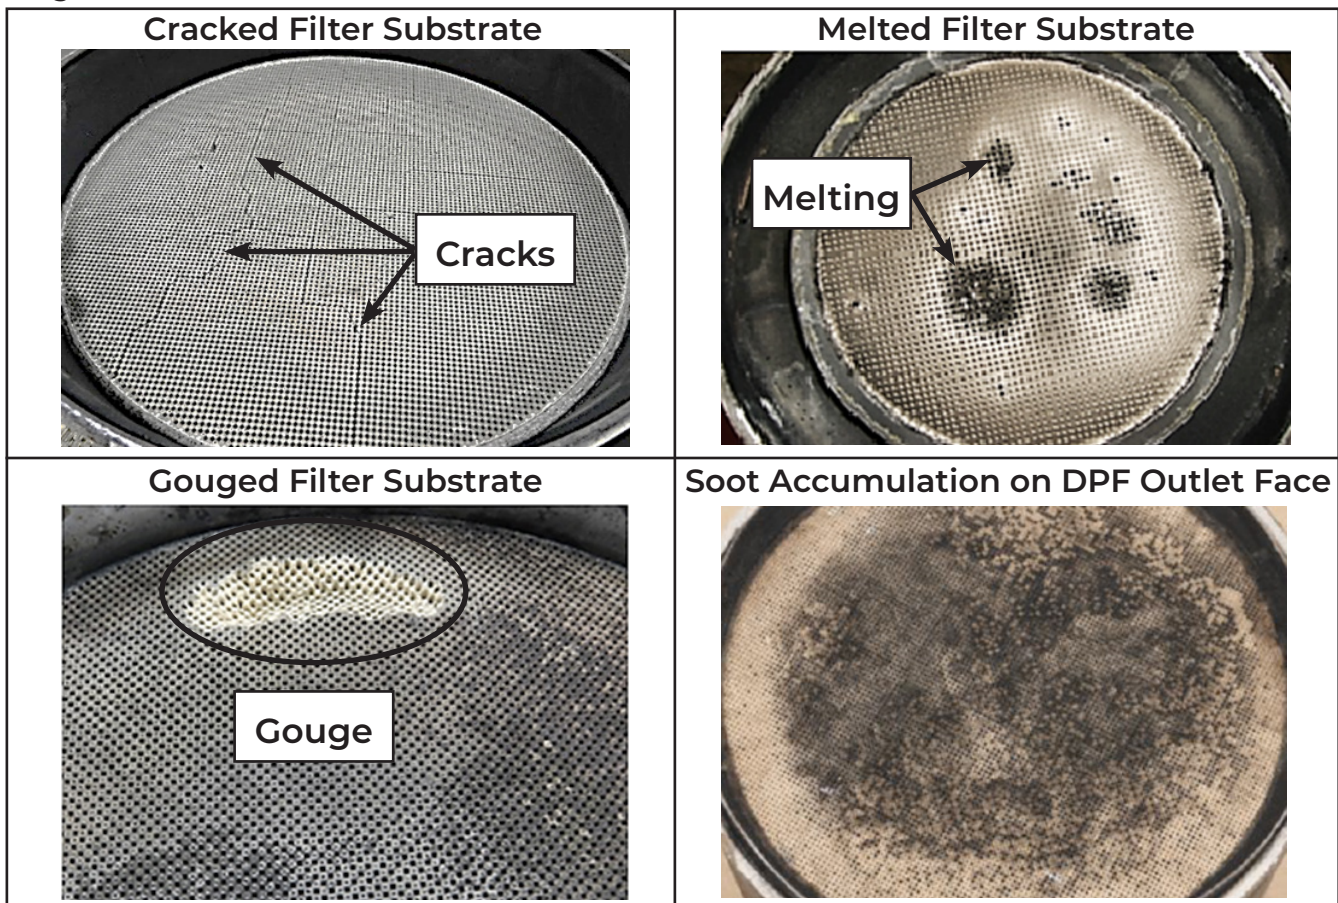

*The above pictures are examples of core conditions—actual conditions may vary.  
Alliant Power reserves the right to make final acceptance determination.*

5. If the DPF core shows signs of any of the above conditions, the core is not in acceptable condition
6. If the core is in visually acceptable condition per the above criteria, please return to Alliant Power
  - a. Please refer to the [Core Return Process](#) document for remaining instructions

For more information visit

**AlliantPower.com**